

# Io/Io<sup>LA</sup>/Io<sup>LD</sup> Firmware Update

## Release Notes

**Version 21.26 (Io), Version 2.6 (IoLA), and Version 1.3 (IoLD)**

### Firmware Update Contents

---

This software release reduces jitter on the outputs when operating in freerun mode. This jitter fix applies to both SDI and Analog outputs (on those products which have SDI and Analog outputs, respectively).

### Changed In This Release

---

Reduced jitter on the outputs when operating in freerun mode

### To install the firmware

---

1. Ensure your Io/IoLA/IoLD is connected to the PowerMac and powered ON.
2. Download the firmware update from our webserver's Io support page ([http://www.aja.com/support\\_Io.html](http://www.aja.com/support_Io.html)). Ensure that you download the correct Firmware update for the type of Io you have (Io, IoLA, or IoLD).
3. The file downloaded is a ".sit" archive that requires a current Alladin Stuffit expander to un-archive. Use Stuffit Expander or Stuffit Deluxe to expand the archive.
4. As stuffit expands the archive file it will create a file on your desktop.
5. Double-click the file to run the firmware updater. The application will tell you the current Io version and serial number and ask you if you wish to proceed. When run, the application will transfer the new firmware code to the Io/IoLA/IoLD.
6. Do not turn power OFF to the Io system while the application is updating the firmware. Follow the instructions provided by the application and wait until the update completes before disconnecting power from Io or powering it down.
7. After updating, ensure the Io/IoLA/IoLD works properly by capturing and then playing back some test source material.