

# HD10MD4 Mini-Converter

## HD to SD Down Converter

# Installation & Operation Guide

Version 1.0

Published: October 6, 2015



Because it matters.®

**AJA**  
VIDEO SYSTEMS

# Table of Contents

---

<b>Notices .....</b>	<b>4</b>
Trademarks .....	4
Copyright .....	4
Contacting Support .....	4
<b>Chapter 1: Introduction .....</b>	<b>5</b>
Overview .....	5
Features .....	5
HD10MD4 Simplified Block Diagram .....	6
HD10MD4 I/O Connections .....	6
User Controls .....	6
Installation .....	7
<b>Chapter 2: Operation .....</b>	<b>8</b>
Default Operational Settings .....	8
DIP Switches .....	8
DIP Switch Settings .....	9
USB Control and Setup—Using AJA Mini-Config .....	10
Acquiring Mini-Config .....	10
Mini-Converter Documentation .....	10
Installing Mini-Config .....	11
PC Installation .....	11
Mac Installation .....	12
Running Mini-Config .....	12
PC Startup .....	13
Mac Startup .....	13
Saving Setups .....	13
Operating Mini-Config .....	13
Running Multiple Mini-Converters .....	14
Tabbed Screens .....	15
Video Screen .....	15
Analog Output Screen .....	17
Update Tab Screen .....	18
Software Update Procedure .....	18
Info Tab Screen .....	19
<b>Appendix A: Specifications .....</b>	<b>20</b>
Video Input .....	20
Input Formats .....	20
Video Output .....	20
Output Formats .....	20
Video Processing .....	20
User Controls .....	20
Physical .....	21
Power .....	21
Size .....	21
Environment .....	21
<b>Appendix B: Safety and Compliance .....</b>	<b>22</b>
Federal Communications Commission (FCC) Compliance Notices .....	22
Class B Interference Statement .....	22

FCC Caution .....	22
Canadian ICES Statement .....	22
European Union and European Free Trade Association (EFTA)	
Regulatory Compliance .....	23
Declaration of Conformity .....	23
Recycling Notice .....	24
Korea KCC Compliance Statement .....	24
Taiwan Compliance Statement .....	24
Japanese Compliance Statement .....	24
Translated Warning and Caution Messages .....	25
Before Operation Please Read These Instructions .....	25
<b>Warranty Information .....</b>	<b>31</b>
Limited Warranty .....	31
<b>Index .....</b>	<b>32</b>

# Notices

---

## Trademarks

---

AJA®, Io®, Ki Pro®, KONA®, KUMO®, T-TAP®, Because it matters.® and ROI® are registered trademarks of AJA Video Systems, Inc. in the United States. AJA and Ki Pro are trademarks of AJA Video Systems, Inc. registered in other countries. AJA Control Room™, CION™, Corvid Ultra™, FiDO™, Science of the Beautiful™, TruScale™, TruZoom™, V2Analog™ and V2Digital™ are trademarks of AJA Video Systems, Inc.

AirPort, Apple, Apple logo, AppleShare, AppleTalk, FireWire, iPod, iPod touch, Mac and Macintosh are registered trademarks of Apple Inc. Final Cut Pro, QuickTime and QuickTime logo are trademarks of Apple Inc.

Avid, Avid DNxHD and Media Composer are registered trademarks of Avid Technology, Inc.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC.

DVI is a registered trademark of DDWG.

TASCAM is a registered trademark of TEAC Corporation.

Dolby® and the double-D Dolby logo are registered trademarks of Dolby Laboratories Licensing Corporation.

All other trademarks are the property of their respective holders.

## Copyright

---

Copyright © 2015 AJA Video Systems, Inc. All rights reserved. All information in this manual is subject to change without notice. No part of the document may be reproduced or transmitted in any form, or by any means, electronic or mechanical, including photocopying or recording, without the express written permission of AJA Video Systems, Inc.

## Contacting Support

---

When calling for support, have all information at hand prior to calling.

To contact AJA for sales or support, use any of the following methods:

*Telephone:* +1.530.271.3190

*FAX:* +1.530.271.3140

*Web:* <http://www.aja.com>

*Support Email:* [support@aja.com](mailto:support@aja.com)

*Sales Email:* [sales@aja.com](mailto:sales@aja.com)

# Chapter 1: Introduction

---



## Overview

---

The AJA HD10MD4 is a miniature digital downconverter for converting HD-SDI video to standard definition SDI and analog component or composite video. The HD10MD4 uses a full 10-bit data path and multi-point interpolation to produce excellent quality down-converted video. In addition, the HD10MD4 converts 23.98 to a 59.94 Hz output video using the standard 3:2 pulldown technique. The output can be formatted for either 4:3 or 16:9 standard definition monitors. For 4:3 monitors, the output can be formatted for either the Letterbox or Crop modes. The HD10MD4 can also receive SD video and output a different aspect ratio. The HD10MD4 simultaneously passes video to both the SDI and analog outputs. Eight channels of embedded audio channel can also be passed to the SDI output.

## Features


---

- Broadcast-Quality HD to SD down conversion
- Multi-Standard
- Dual-rate HD-SD/SDI input
- HD-SDI input: SMPTE 292 HD-SDI digital video
  - 1080i 50, 59.94
  - 1080PsF: 23.98, 25, 29.97
  - 1080p: 23.98, 25, 29.97
  - 720p: 50, 59.94
- HD-SDI outputs: Equalized and buffered copy of input
- SD-SDI output: SMPTE 259 SDI digital video
- Analog outputs: Component or Composite video (10 bit)
- External DIP switch and Mini-Config configuration

- Uses universal input +5V power supply AJA model DWP-U-R1 (included)

**NOTE:** The HD10MD4 automatically switches to PAL anytime the input is 1080i 50, 1080PsF 25 or 1080p25. All other frames rates have an NTSC output: 59.94, 29.97 and 23.98.

## HD10MD4 Simplified Block Diagram

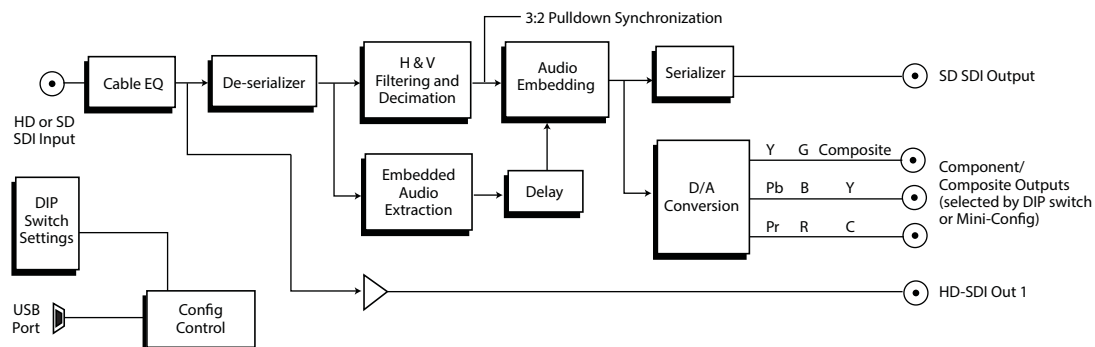

## HD10MD4 I/O Connections



## User Controls

The direct user interface for the HD10MD4 is an eight position DIP switch accessible through a cut-out in the bottom of the unit. The exact function of the DIP switches are described in ["DIP Switches" on page 8](#).

The HD10MD4 also supports Mini-Config application control over its USB port to a connected PC or Mac.

# Installation

---

Typically, installation consists of the following:

- Direct Control**
1. Disconnect DC power from the converter.
  2. Configure the DIP switches for the desired equipment configuration and video formats.
  3. Connect video equipment to the converter BNCs.
  4. Apply power to the converter.

- Mini-Config Control**
1. Disconnect DC power from the converter.
  2. Connect video equipment to the converter BNCs.
  3. Apply power to the converter.
  4. The converter will now run using the default factory settings. If you wish to alter the factory settings with Mini-Config you'll need to:
    - Set DIP switch 1 ON (right) to permit remote Mini-Config control.
    - Install the AJA Mini-Config software on your computer.
    - Attach the unit via USB to your computer.
    - Make your changes using the Mini-Config setup screens. This process is detailed in [\*"USB Control and Setup—Using AJA Mini-Config" on page 10.\*](#)

# Chapter 2: Operation

---

## Default Operational Settings

---

The HD10MD4 Mini-Converter ships from the factory with the following configuration (all DIP switches Off - Left):

- Local (DIP switch) control
- Component video
- YPbPr format
- Pedestal Off
- Crop Off
- Monitor 4:3
- Focus Off
- Graticule Off

If these settings apply to your requirements, you can simply connect the video input and output signal cables and power up the unit.

For other applications, you can configure the unit using its DIP switch settings, or by using the Mini-Config application and a PC or Mac via USB.

## DIP Switches

---

DIP switches on the bottom of the unit are used to configure it without a computer.



DIP Switches  
OFF ← ON  
Left      Right



## DIP Switch Settings

**Table 1. HD10MD4 DIP Switch Setting Descriptions**

SWITCH	FUNCTION	DIP Set LEFT, OFF (default)	DIP Set RIGHT, ON
1	Remote	<b>LOCAL</b> (DIP switch) control	<b>REMOTE</b> (Mini-Config) control
2	Analog output	Selects Component output ( <b>CMPNT</b> )	Selects composite video output ( <b>CMPST</b> )
3	Type of Component Video on 3 Output BNCs	Selects <b>YPbPr</b>	Selects <b>RGB</b>
4	Pedestal	Pedestal <b>OFF</b>  NOTE: Pedestal is only active if input is 525i composite, or 525i component and Component Color Space is RGB or YPbPr (Betacam).	Pedestal <b>ON</b> . This setting also changes analog output to BETA levels when in YPbPr mode.
5	Crop	No Crop ( <b>OFF</b> )	Crop <b>ON</b> (if S6 switch MONITOR is set to 4:3)
6	Set Monitor Output to 4:3 or 16:9	Selects <b>4:3</b>  NOTE: Monitor setting only via DIP switch. Mini-Config equivalent controls are HD Down Convert.	Selects <b>16:9</b>
7	Focus	Turn Focus <b>OFF</b>	Turn Focus <b>ON</b> (Zoom to center 720 x 486 image)
8	Graticule	Turn Graticule <b>OFF</b>  NOTE: Graticule is only available with HD (16:9) input, Crop is Off, a 4:3 Monitor output setting, and Focus is Off.	Turn Graticule <b>ON</b> (4:3 safe area)

The following table shows the combinations of DIP switch settings required to configure the three BNCs below the SDI Output BNC.

**Table 2. Output Selection Matrix For Output 3 BNCs**

Desired Output Format	DIP S1 CONTROL	DIP S2 CMPNT/CMPST	DIP S3 YPbPr/RGB	DIP S4 Pedestal
1 Composite and 1 Y/C (pedestal)	LEFT	RIGHT	N/A	RIGHT
1 Composite and 1 Y/C (no pedestal)	LEFT	RIGHT	N/A	LEFT
RGB (no pedestal)	LEFT	LEFT	RIGHT	LEFT
RGB (pedestal)	LEFT	LEFT	RIGHT	RIGHT
SMPTE component (BETA625)/EBU-N10	LEFT	LEFT	LEFT	LEFT
BETA 525 component	LEFT	LEFT	LEFT	RIGHT

## USB Control and Setup—Using AJA Mini-Config

Your AJA Mini-Converter can be used right out of the box for some applications since it is designed to recognize inputs and perform standard actions automatically by default. However, to use its full capability, you must use AJA's Mini-Config software application for PCs and Macs. This same application can be used to update to new Mini-Converter software released by AJA.

**NOTE:** DIP switch 1 must be ON (Remote, Right) to permit Mini-Config control of the unit.

### Acquiring Mini-Config

AJA's Mini-Config application is available for download from the AJA website, and is provided on CD with each Mini-Converter.

To download the latest Mini-Config package, which includes the Mini-Config application, Mini-Converter firmware, and documentation, go to:

<https://www.aja.com/en/products/mini-converters/mini-config-software>

Select either the Windows or Mac icon to download the desired version.

### Mini-Converter Documentation

Included with the Mini-Config package is a complete set of documentation for all Mini-Converters supported by Mini-Config. A .PDF of the *Installation and Operation Guide* for the currently connected Mini-Converter can be accessed from the Mini-Config UI via the **Help/Manual** drop-down menu.

Documentation for all AJA Mini-Converters that use Mini-Config can also be accessed directly in the Mini-Config download package Documentation folder, from the Mini-Converter CD, and via the Documentation icon available on the Mac installer.

Documentation (and firmware) included with the Mini-Config application are the versions available at the time of distribution. However, Mini-Converter software, firmware and documentation are updated regularly, so newer versions may exist.

To download the latest documentation for an individual Mini-Converter, go to:  
<https://www.aja.com/en/category/mini-converters>  
and navigate to the Support webpage of that Mini-Converter.

## Installing Mini-Config

**PC Installation** To install Mini-Config on a Windows PC, you may download the application from the AJA website or use the CD supplied with the Mini-Converter.

- For a download, open the AJA\_MiniConfig.zip file and double-click on the MiniInstaller.msi file.
- For a CD, insert it into the computer, open a window for the CD, and double-click on the MiniInstaller.msi file.

A Setup Wizard will guide you through the installation.


**Figure 1. Mini-Config PC Setup Wizard**



Just click **Next** to begin. Answer the questions in the subsequent dialogues. When finished, an AJA Mini-Config shortcut will be installed on the desktop, and you will be able to locate the Mini-Config application in the AJA folder in the Programs listing.

If the Mini-Config application already exists on the PC, a different Setup Wizard appears.

**Figure 2. Mini-Config Setup Wizard, Reinstallation**

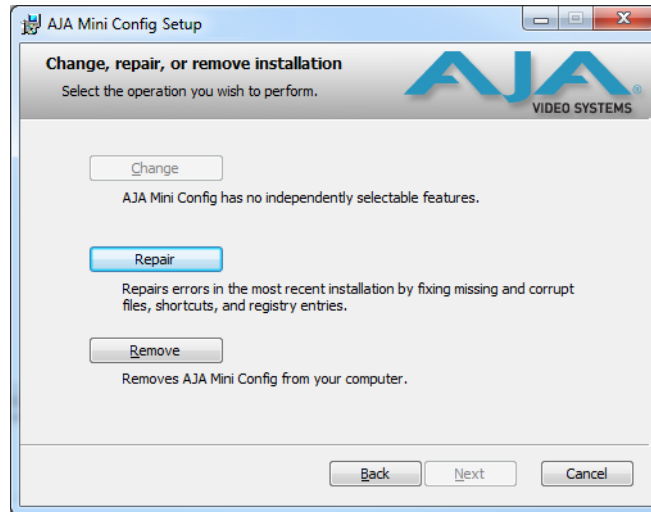

With this screen you can **Repair** (reinstall) or **Remove** (uninstall) Mini-Config on the PC.

## Mac Installation


To install the application on a Mac, you may download the application from the AJA website (select the Apple icon on the Mini-Config Support webpage), or use the CD supplied with the Mini-Converter.

**NOTE:** *Macintosh computers must be Intel-based (G5, G4 and earlier models will not work with Mini-Config).*

- For a download, open the AJA\_MiniConfig folder and double-click on the AJAMiniConfig.dmg file.
- For a CD, insert it into the computer, open a window for the CD, and double-click on the AJA MiniConfig.dmg file.

Answer the prompt and a utility program will be launched.

**Figure 3. Mini-Config Mac Installer**

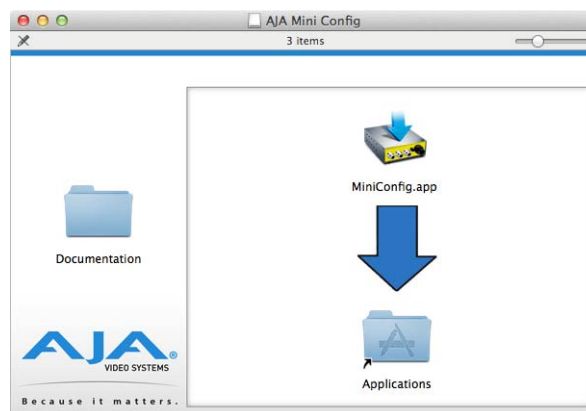


To complete the installation drag the “MiniConfig.app” icon to the Applications folder.

## Running Mini-Config


Connect the Mini-Converter to the PC or Mac via the supplied USB cable. Connect the external power supply (supplied) to the Mini-Converter.

**PC Startup** To run Mini-Config on a PC, double-click on the AJA Mini-Config icon on your desktop, or open the AJA folder in the program list and click on the AJA Mini-Config application located inside the Mini-Config folder.

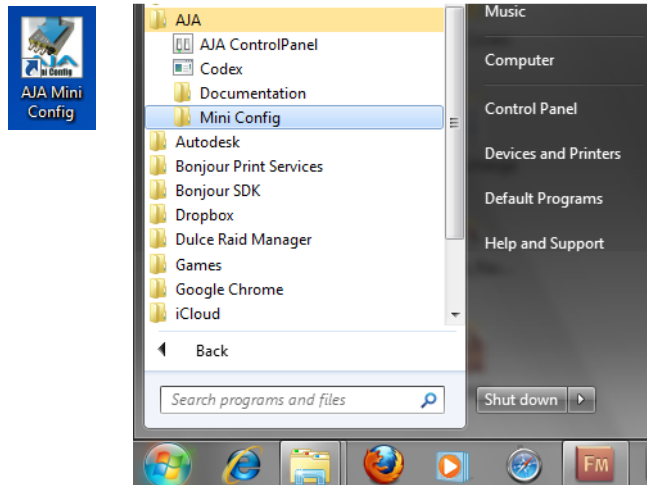

**Mac Startup** To run Mini-Config on a Mac, open the Applications folder and locate the AJA Mini-Config application. Double-click the application to launch it.

**Saving Setups** A **File** drop down menu on the Mini-Config application bar allows you to save the current state of the Mini-Converter to a preset file for later recall.

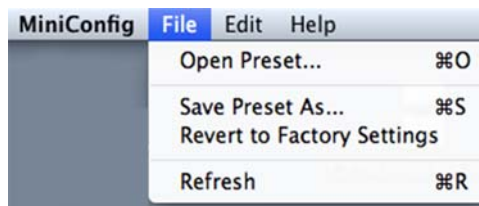

Using this feature you can set up the converter for different applications, storing each configuration (**Save Preset As...**) with a unique name for easy recall (**Open Preset...**).

A **Revert to Factory Settings** menu item similarly allows you to change the settings back to AJA's factory defaults.

## Operating Mini-Config

The Mini-Config application provides a graphic interface for viewing settings and updating software. It consists of an information area at the top that shows the available Mini-Converters attached to the computer via USB, with a graphical rendering of the selected Mini-Converter showing all the connectors and their current state.

Colored text next to the connectors indicates the signal type and what the Mini-Converter is doing:

- Blue text indicates the values automatically selected
- Black text indicates values that you have manually selected
- Red text indicates the Mini-Converter is not detecting a signal, or cannot operate with the current user settings.

**NOTE:** *Even if no output device is detected, the SDI connector text still shows the signal it is outputting.*

**NOTE:** Configuration settings in red will change based on the attached output device as well as input signals. For improved accuracy and reliability, you should configure the Mini-Converter only when the target output device is attached and input signals are supplied at the inputs.


Screens are virtually the same on both PC and Mac, with subtle differences that reflect the general look of the platform environment.

## Running Multiple Mini-Converters

Mini-Config can manage multiple AJA Mini-Converters connected via USB—even when they are of differing types. However it only connects to one at a time. You can choose which Mini-Converter you wish to control using the pulldown menu in the upper right hand corner. If you want to configure multiple Mini-Converters in parallel, you can do it by running multiple instances of the Mini-Config application and have each control a different Mini-Converter.

**NOTE:** During a Mini-Converter firmware update, only one Mini-Converter should be connected to the computer via USB.

**Figure 4. Example Mini-Config Screen**

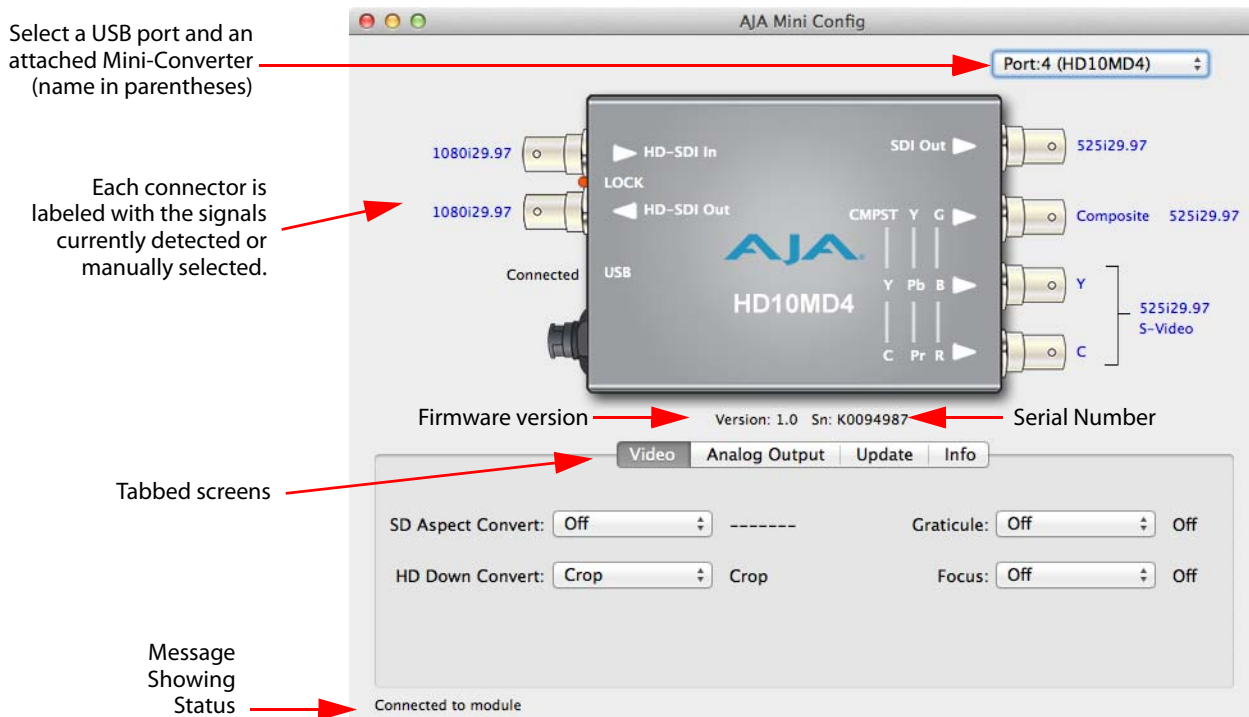

Selecting a Mini-Converter with the pulldown menu causes this application to connect to the selected converter. The graphic of Mini-Converter and text below it provides:

- Type of converter
- Firmware version
- Serial number of the unit.

A status field at the bottom of the screen shows if your application is connected and communicating with the Mini-Converter.


When configuring the Mini-Converter, select it from the top pulldown, view the current settings and change any values. Making a change communicates that new value to the Mini-Converter's non-volatile memory.

## Tabbed Screens

The Tabs delineate control screens with groups of controls for each type of task to be performed.

The controls for the actual configuration parameters are specific to each Mini-Converter type. When you Click on any of the tab buttons, the pane below the tabs will change to match your tab selection. Any changes you make are immediately applied and will be saved, overwriting previous settings.

## Video Screen

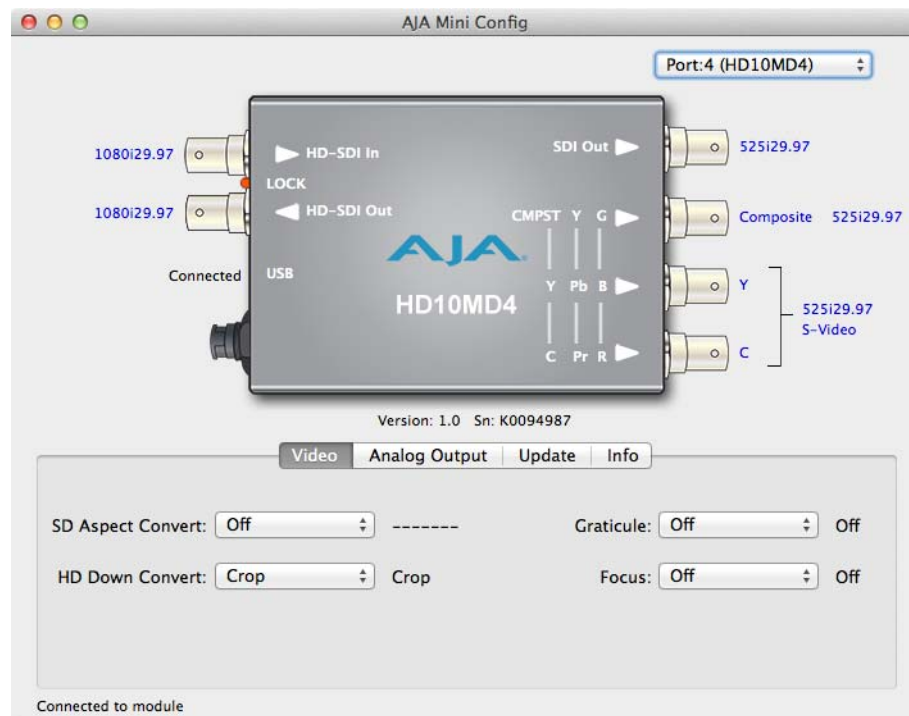

Click on the *Video* tab to view and make changes to the converter's video processing settings.

### SD Aspect Convert


Determines the mode when converting from SD input video to an SD output video format. There is no DIP switch equivalent for this control. The setting is saved in nonvolatile memory in the module and used for all subsequent operation:

- Off (default) - The input image is copied to the output with no scaling.
- Letterbox - The input frame is scaled vertically to a 16x9 letterboxed size (anamorphic to letterbox conversion).
- H Crop - The input frame is scaled horizontally to 16x9, then center-cropped (anamorphic to center crop conversion).
- Pillarbox - The input frame is scaled horizontally to make a pillarbox output (4x3 to anamorphic conversion).
- V Crop - The input frame is scaled vertically to make a vertically cropped output (letterbox to anamorphic conversion).
- 14x 9 - The input frame is scaled horizontally and vertically as a compromise between H Crop and Letterbox (anamorphic to 14x9 conversion).

- HD Down Convert** Determines the mode when converting from HD input video to an SD output video format:
- Crop (default) - Image is cropped to fit new screen size.
  - Letterbox - Image is reduced with black top and bottom added to image area, with the aspect ratio preserved.
  - Anamorphic - HD image is converted to full-screen SD with a 16x9 aspect ratio (anamorphic).
  - 14x9 - Image is reduced slightly with aspect ratio preserved. Black is added top and bottom, and the left and right sides are cropped.
  - Auto AFD - Automatically selects the best Downconvert mode based on the input video's Active Format Description (AFD) code. If the input video is not carrying an AFD VANC code, the unit defaults to Crop.
- Graticule** Turns on or off a graticule display indicating a 4:3 aspect ratio.
- Off (default)
  - On
- Graticule is only available with HD (16:9) input, Letterbox or Anamorphic HD Down Convert mode (either manually selected or AutoAFD), and with Focus set to Off. When inactive, status is dashes.
- Focus** Zooms to center 720 x 486 (for 525i) or 720 x 576 (for 625i).
- Off (default)
  - On



## Analog Output Screen

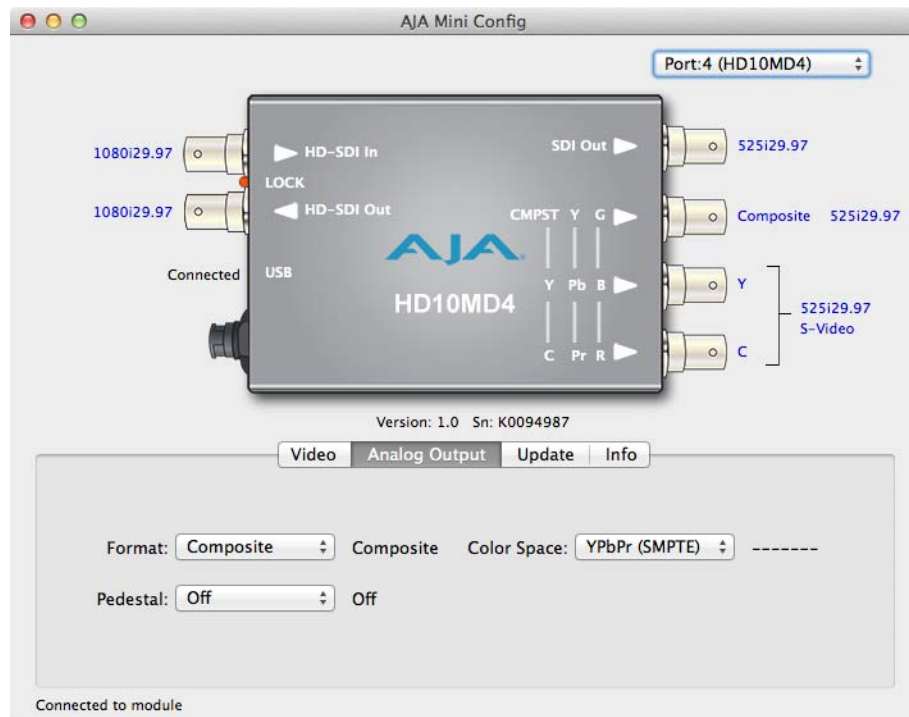

Click on the *Analog Output* tab to view and make changes to the converter's analog video output settings.

**Format** Selects the desired analog output video format:

- Composite (default)
- Component

**Pedestal** Sets the analog video black level:


- Off (default) - Sets black level at 0 IRE.
- On - Sets black level at 7.5 IRE

Pedestal is only active if input is 525i composite, or 525i component and Component Color Space is RGB or YPbPr (Betacam). When inactive, status is dashes.

**Color Space** Selects the desired output video format color space:

- YPbPr (SMPTE) (default)
- YPbPr (Betacam)
- RGB

## Update Tab Screen

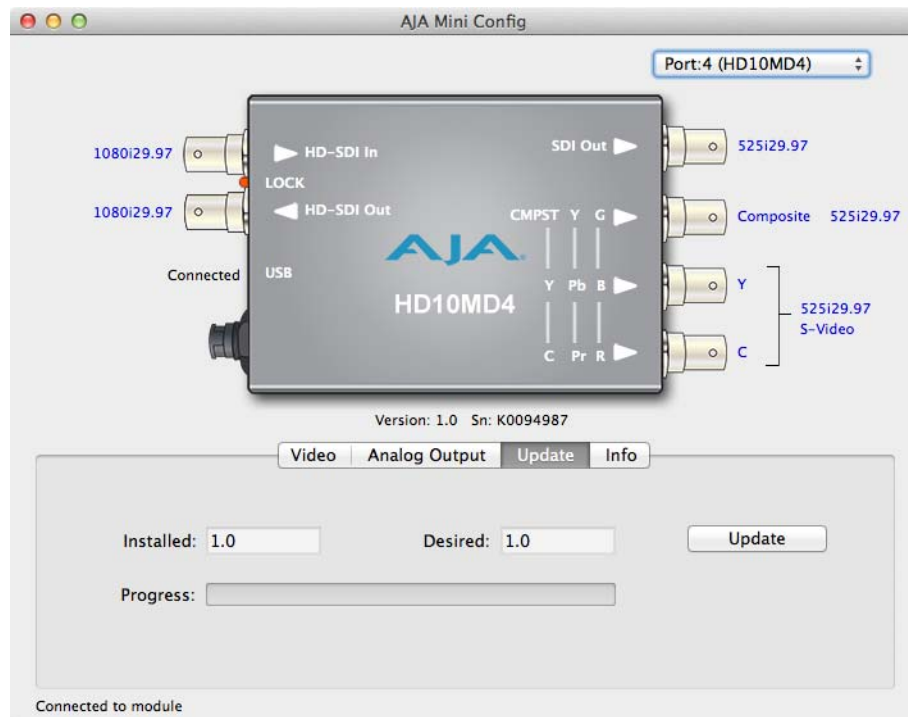

Use this Update screen to view the software version currently installed on the converter or install new software.

**NOTE:** When discussing Mini-Converters, “Firmware” is software that will be stored in the Mini-Converter’s non-volatile memory and used when it is powered up. This is something different than the Mini-Config application software. The version numbers shown in the Update screen refer only to the firmware.

**Installed:** This field shows the version of the firmware currently installed inside the Mini-Converter.

**Desired:** This field shows the version of firmware embedded in the Mini-Config application which you can install into the Mini-Converter by clicking the **Update** button.


**Update** This button initiates a firmware update operation loading the “Desired” version of firmware into the Mini-Converter’s non-volatile memory.

**Progress:** This indicator bar shows the progress of firmware installation.

## Software Update Procedure

1. Check the AJA website for new Mini-Config software for your Mini-Converter. If new software is found, download it and uncompress the file archive (zip). Here is the URL to use when checking:  
<http://www.aja.com/en/products/mini-converters/mini-config-software>
2. Connect the Mini-Converter to a Mac or PC via a USB port on the computer and run the new Mini-Config software just downloaded.
3. Click on the Update tab.
4. Check the Installed version level against the Desired version level. If the Desired is newer, then click the **Update** button to download the new firmware to the Mini-Converter; progress will be shown via the “Progress” thermometer bar.

## Info Tab Screen

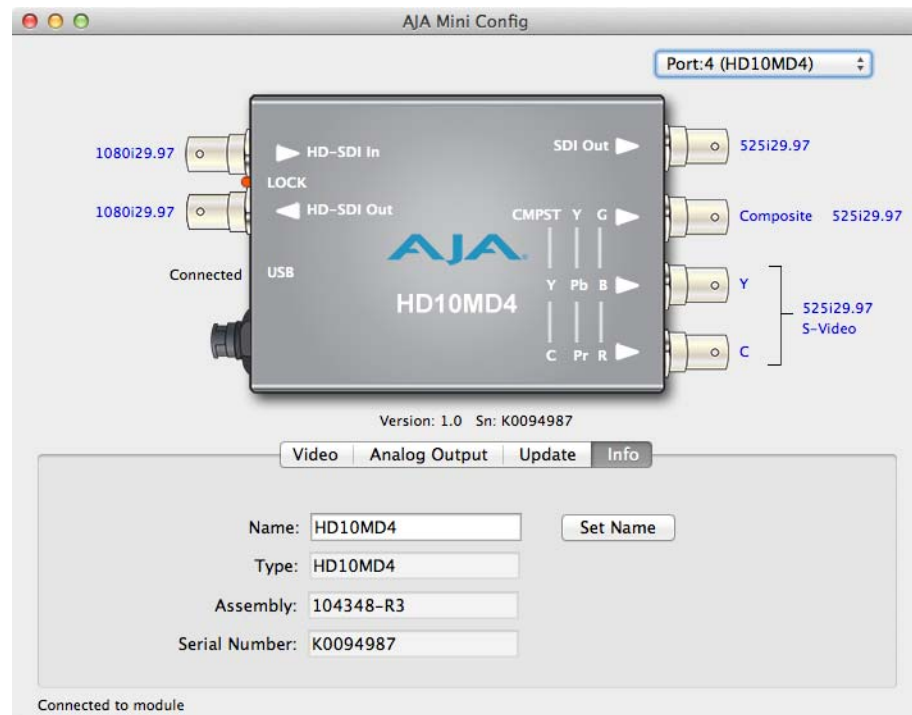

This screen provides basic information about the Mini-Converter. This information is mostly useful when calling AJA Support for service or technical support.

**Name** This field allows you to give your Mini-Converter a name. This can be useful if you have several Mini-Converters attached to a Mac/PC via USB so you can distinguish between them easily (especially if they're the same model).

*Type:* This is the factory set model name of the Mini-Converter.

*Assembly:* This is the factory assembly number.

*Serial Number:* This is the factory set unique serial number of your Mini-Converter. If you ever call AJA Support for service, you may be asked for this number.

# Appendix A: Specifications

---

## Video Input

---

- 1 x BNC
- HD SMPTE 292M, 10-bit
- SD SMPTE 259M, 10-bit

## Input Formats

- (automatic configuration)
- 1920x1080i 25, 29.97 (50, 59.94 fields)
  - 1920x1080p 23.98, 25, 29.97
  - 1920x1080PsF 23.98, 25, 29.97
  - 1280x720p 50, 59.94
  - 525i
  - 625i

## Video Output

---

- |                |   |
|----------------|---|
| <b>Digital</b> | 1 x BNC (processed output)  |
|                | • SDI - SMPTE 259M, 10-bit  |
|                | 1 x BNC (loop through input)  |
| <b>Analog</b>  | 3 x BNC   |
|                | • YPbPr-SMPTE, EBU-N10, Betacam, RGB, NTSC, PAL, YC (S-Video), 10-bit |

## Output Formats

- 525i
- 625i

## Video Processing

---

- |                           |  |
|---------------------------|--|
| <b>Down Conversion</b>    | • Multi-point interpolation, 10-bit processing |
|                           | • 3:2 conversion for 23.98 inputs              |
| <b>Frequency Response</b> | • Y +0, -.5db to 30 MHz                        |
|                           | • C +/- .25db to 15 MHz                        |

## User Controls

---

- External DIP switch
- Mini-Config application via USB

## Physical

---

### Power

- +5 to 20V DC regulated, 7 watts max
- AJA external power supply model DWP-U-R1 (included):
  - 100-240V, 50/60Hz universal input

### Size

- 5.8" x 3.1" x 1 (147 x 79 x 25mm)

### Environment

*Operating Temperature:* 0 to 40 degrees C (32 to 104 degrees F)

*Operating Relative Humidity:* 10-90% non-condensing

*Operating Altitude:* <3,000 meters (<10,000 feet)

*Safe Storage Temperature  
(Power OFF):* -40 to 60 degrees C (-40 to 140 degrees F)

# Appendix B: Safety and Compliance

---

## Federal Communications Commission (FCC) Compliance Notices

---

### Class B Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Canadian ICES Statement

---

Canadian Department of Communications Radio Interference Regulations

This digital apparatus does not exceed the Class B limits for radio-noise emissions from a digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique respecte les limites de bruits radioélectriques visant les appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada. Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

# European Union and European Free Trade Association (EFTA)

## Regulatory Compliance

This equipment may be operated in the countries that comprise the member countries of the European Union and the European Free Trade Association. These countries, listed in the following paragraph, are referred to as The European Community throughout this document:

AUSTRIA, BELGIUM, BULGARIA, CYPRUS, CZECH REPUBLIC, DENMARK, ESTONIA, FINLAND, FRANCE, GERMANY, GREECE, HUNGARY, IRELAND, ITALY, LATVIA, LITHUANIA, LUXEMBOURG, MALTA, NETHERLANDS, POLAND, PORTUGAL, ROMANIA, SLOVAKIA, SLOVENIA, SPAIN, SWEDEN, UNITED KINGDOM, ICELAND, LICHTENSTEIN, NORWAY, SWITZERLAND

### Declaration of Conformity

Marking by this symbol indicates compliance with the Essential Requirements of the EMC Directive of the European Union 2004/108/EC.



This equipment meets the following conformance standards:

- Safety:* EN 60065: 2002 + A1: 2006 + A11: 2008 + A2: 2010 + A12: 2011 (GS License)  
IEC 60065: 2001 + A1: 2005 + A2: 2010 (CB Scheme Report/Certificate)  
Additional licenses issued for specific countries available on request.
- Emissions:* EN 55103-1: 2009, CISPR 22: 2008, EN 55022: 2010,  
EN 61000-3-2: 2009, EN 61000-3-3:2008  
Environments: E2, E3 and E4
- Immunity:* EN 55103-2: 2009, EN 61000-4-2:2009, EN 61000-4-3:2010, EN 61000-4-4:2010,  
EN 61000-4-5:2005, EN 61000-4-6:2009 , EN 61000-4-11:2004  
Environments: E2, E3 and E4
- The product is also licensed for additional country specific standards as required for the International Marketplace.




**Warning!**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung! Dieses ist ein Gerät der Funkstörgrenzwertklasse B. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention! Ceci est un produit de Classe B. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

## Recycling Notice

	<p>This symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.</p>
---	---

## Korea KCC Compliance Statement

<p>B급 기기 (가정용 방송통신기자재)</p> <p>Class B (Broadcasting Communication Equipment for Home Use)</p>	<p>이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.</p> <p>As an electromagnetic wave equipment for home use (Class B), this equipment is intended to use mainly for home use and may be used in all areas.</p>
---	---

## Taiwan Compliance Statement

警告使用者：  
這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

This is a Class B product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class B. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Japanese Compliance Statement

### 2. Class B ITE

この装置は、クラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

This is a Class B product based on the standard of the VCCI Council (VCCI V-3/2014.04). If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.



## Translated Warning and Caution Messages

---

The following caution statements, warning conventions, and warning messages apply to this product and manual.



Warning Symbol





Caution Symbol

## Before Operation Please Read These Instructions

---

	<p><b>Warning!</b> Read and follow all warning notices and instructions marked on the product or included in the documentation.</p> <p><b>Avertissement !</b> Lisez et conformez-vous à tous les avis et instructions d'avertissement indiqués sur le produit ou dans la documentation.</p> <p><b>Warnung!</b> Lesen und befolgen Sie die Warnhinweise und Anweisungen, die auf dem Produkt angebracht oder in der Dokumentation enthalten sind.</p> <p><b>¡Advertencia!</b> Lea y siga todas las instrucciones y advertencias marcadas en el producto o incluidas en la documentación.</p> <p><b>Aviso!</b> Leia e siga todos os avisos e instruções assinalados no produto ou incluídos na documentação.</p> <p><b>Avviso!</b> Leggere e seguire tutti gli avvisi e le istruzioni presenti sul prodotto o inclusi nella documentazione.</p>
	<p><b>Warning!</b> Do not use this device near water and clean only with a dry cloth.</p> <p><b>Avertissement!</b> N'utilisez pas cet appareil près de l'eau et nettoyez-le seulement avec un tissu sec..</p> <p><b>Warnung!</b> Das Gerät nicht in der Nähe von Wasser verwenden und nur mit einem trockenen Tuch säubern.</p> <p><b>¡Advertencia!</b> No utilice este dispositivo cerca del agua y límpielo solamente con un paño seco.</p> <p><b>Aviso!</b> Não utilize este dispositivo perto da água e limpe-o somente com um pano seco.</p> <p><b>Avviso!</b> Non utilizzare questo dispositivo vicino all'acqua e pulirlo soltanto con un panno asciutto.</p>

	<p><b>Warning!</b> Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.</p> <p><b>Avertissement !</b> Ne bloquez aucune ouverture de ventilation. Suivez les instructions du fabricant lors de l'installation.</p> <p><b>Warnung!</b> Die Lüftungsöffnungen dürfen nicht blockiert werden. Nur gemäß den Anweisungen des Herstellers installieren.</p> <p><b>¡Advertencia!</b> No bloquee ninguna de las aberturas de la ventilación. Instale de acuerdo con las instrucciones del fabricante.</p> <p><b>Aviso!</b> Não obstrua nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.</p> <p><b>Avviso!</b> Non ostruire le aperture di ventilazione. Installare in conformità con le istruzioni del fornitore.</p>
---	---

	<p><b>Warning!</b> Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.</p> <p><b>Avertissement !</b> N'installez pas l'appareil près d'une source de chaleur telle que des radiateurs, des bouches d'air de chauffage, des fourneaux ou d'autres appareils (amplificateurs compris) qui produisent de la chaleur.</p> <p><b>Warnung!</b> Nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizregistern, Öfen oder anderen Wärme erzeugenden Geräten (einschließlich Verstärkern) aufstellen.</p> <p><b>¡Advertencia!</b> No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas u otros aparatos (incluidos amplificadores) que generan calor.</p> <p><b>Aviso!</b> Não instale perto de nenhuma fonte de calor tal como radiadores, saídas de calor, fogões ou outros aparelhos (incluindo amplificadores) que produzam calor.</p> <p><b>Avviso!</b> Non installare vicino a fonti di calore come termosifoni, diffusori di aria calda, stufe o altri apparecchi (amplificatori compresi) che emettono calore.</p>
---	---

**Warning!**

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.


**Avertissement!** La sécurité de la prise polarisée ou de la prise de type mise à la terre ne doit en aucun cas être empêchée de fonctionner. Une prise polarisée a deux broches, l'une étant plus large que l'autre. Une prise de type mise à la terre a deux broches et une troisième broche pour la mise à la terre. La broche large ou la troisième broche sont fournies pour votre sécurité. Si la prise fournie ne s'insère pas dans votre prise femelle, consultez un électricien pour le remplacement de la prise femelle obsolète.


**Warnung!** Der Sicherheitszweck des gepolten bzw. Schukosteckers ist zu berücksichtigen. Ein gepolter Stecker verfügt über zwei Pole, von denen einer breiter als der andere ist. Ein Schukostecker verfügt neben den zwei Polen noch über einen dritten Pol zur Erdung. Der breite Pol bzw. der Erdungspol dienen der Sicherheit. Wenn der zur Verfügung gestellte Stecker nicht in Ihren Anschluss passt, konsultieren Sie einen Elektriker, um den veralteten Anschluss zu ersetzen.


**¡Advertencia!** No eche por tierra la finalidad del tipo de enchufe polarizado con conexión a tierra. Un enchufe polarizado tiene dos espigas, una más ancha que la otra. Un enchufe con conexión a tierra tiene dos espigas iguales y una tercera espiga que sirve para la conexión a tierra. La espiga ancha, o la tercera espiga, sirven para su seguridad. Si el enchufe suministrado no encaja en el tomacorriente, consulte con un electricista para reemplazar el tomacorriente obsoleto.


**Aviso!** Não anule a finalidade da segurança da ficha polarizada ou do tipo ligação terra. Uma ficha polarizada tem duas lâminas sendo uma mais larga do que a outra. Uma ficha do tipo de ligação à terra tem duas lâminas e um terceiro terminal de ligação à terra. A lâmina larga ou o terceiro terminal são fornecidos para sua segurança. Se a ficha fornecida não couber na sua tomada, consulte um electricista para a substituição da tomada obsoleta.


**Avviso!** Non compromettere la sicurezza della spina polarizzata o con messa a terra. Una spina polarizzata ha due spinotti, di cui uno più largo. Una spina con messa a terra ha due spinotti e un terzo polo per la messa a terra. Lo spinotto largo o il terzo polo sono forniti per motivi di sicurezza. Se la spina fornita non si inserisce nella presa di corrente, contattare un elettricista per la sostituzione della presa obsoleta.


	<p><b>Warning!</b> Since the Mains plug is used as the disconnection for the device, it must remain readily accessible and operable.</p> <p><b>Avertissement!</b> Puisque la prise principale est utilisée pour débrancher l'appareil, elle doit rester aisément accessible et fonctionnelle.</p> <p><b>Warnung!</b> Da der Netzstecker als Trennvorrichtung dient, muss er stets zugänglich und funktionsfähig sein.</p> <p><b>¡Advertencia!</b> Puesto que el enchufe de la red eléctrica se utiliza como dispositivo de desconexión, debe seguir siendo fácilmente accesible y operable.</p> <p><b>Aviso!</b> Dado que a ficha principal é utilizada como a desconexão para o dispositivo, esta deve manter-se prontamente acessível e funcional.</p> <p><b>Avviso!</b> Poiché il cavo di alimentazione viene usato come dispositivo di sconnessione, deve rimanere prontamente accessibile e operabile.</p>
---	---

	<p><b>Warning!</b> Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the device.</p> <p><b>Avertissement!</b> Protégez le cordon d'alimentation pour que l'on ne marche pas dessus ou qu'on le pince, en particulier au niveau des prises mâles, des réceptacles de convenance, et à l'endroit où il sort de l'appareil.</p> <p><b>Warnung!</b> Vermeiden Sie, dass auf das Netzkabel getreten oder das Kabel geknickt wird, insbesondere an den Steckern, den Steckdosen und am Kabelausgang am Gerät.</p> <p><b>¡Advertencia!</b> Proteja el cable de energía para que no se le pise ni apriete, en especial cerca del enchufe, los receptáculos de conveniencia y el punto del que salen del equipo.</p> <p><b>Aviso!</b> Proteja o cabo de alimentação de ser pisado ou de ser comprimido particularmente nas fichas, em tomadas de parede de conveniência e no ponto de onde sai do dispositivo.</p> <p><b>Avviso!</b> Proteggere il cavo di alimentazione in modo che nessuno ci cammini sopra e che non venga schiacciato soprattutto in corrispondenza delle spine e del punto in cui esce dal dispositivo.</p>
---	---

	<p><b>Warning!</b> Unplug this device during lightning storms or when unused for long periods of time.</p> <p><b>Avertissement!</b> Débranchez cet appareil pendant les orages avec éclairso s'il est inutilisé pendant de longues périodes.</p> <p><b>Warnung!</b> Das Gerät ist bei Gewitterstürmen oder wenn es über lange Zeiträume ungenutzt bleibt vom Netz zu trennen.</p> <p><b>¡Advertencia!</b> Desenchufe este dispositivo durante tormentas eléctricas o cuando no se lo utilice por largos periodos del tiempo.</p> <p><b>Aviso!</b> Desconecte este dispositivo da tomada durante trovoadas ou quando não é utilizado durante longos períodos de tempo.</p> <p><b>Avviso!</b> Utilizzare soltanto i collegamenti e gli accessori specificati e/o venduti dal produttore, quali il treppiedi e l'esoscheletro.</p>
---	---

	<p><b>Warning!</b> Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.</p> <p><b>Avertissement !</b> Référez-vous au personnel de service qualifié pour tout entretien. L'entretien est exigé quand l'appareil a été endommagé de quelque manière que ce soit, par exemple lorsque le cordon d'alimentation ou la prise sont endommagés, que du liquide a été versé ou des objets sont tombés dans l'appareil, que l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou est tombé.</p> <p><b>Warnung!</b> Das Gerät sollte nur von qualifizierten Fachkräften gewartet werden. Eine Wartung ist fällig, wenn das Gerät in irgendeiner Weise beschädigt wurde, wie bei beschädigtem Netzkabel oder Netzstecker, falls Flüssigkeiten oder Objekte in das Gerät gelangen, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht ordnungsgemäß funktioniert oder fallen gelassen wurde.</p> <p><b>¡Advertencia!</b> Consulte al personal calificado por cuestiones de reparación. El servicio de reparación se requiere cuando el dispositivo ha recibido cualquier tipo de daño, por ejemplo cable o espigas dañadas, se ha derramado líquido o se han caído objetos dentro del dispositivo, el dispositivo ha sido expuesto a la lluvia o humedad, o no funciona de modo normal, o se ha caído.</p> <p><b>Aviso!</b> Remeta todos os serviços de manutenção para o pessoal de assistência qualificado. A prestação de serviços de manutenção é exigida quando o dispositivo foi danificado mediante qualquer forma, como um cabo de alimentação ou ficha que se encontra danificado/a, quando foi derramado líquido ou caíram objectos sobre o dispositivo, quando o dispositivo foi exposto à chuva ou à humidade, quando não funciona normalmente ou quando foi deixado cair.</p> <p><b>Avviso!</b> Fare riferimento al personale qualificato per tutti gli interventi di assistenza. L'assistenza è necessaria quando il dispositivo è stato danneggiato in qualche modo, ad esempio se il cavo di alimentazione o la spina sono danneggiati, è stato rovesciato del liquido è stato rovesciato o qualche oggetto è caduto nel dispositivo, il dispositivo è stato esposto a pioggia o umidità, non funziona correttamente o è caduto.</p>
---	---

	<p><b>Warning!</b> Do not open the chassis. There are no user-serviceable parts inside. Opening the chassis will void the warranty unless performed by an AJA service center or licensed facility.</p> <p><b>Avertissement!</b> Ne pas ouvrir le châssis. Aucun élément à l'intérieur du châssis ne peut être réparé par l'utilisateur. La garantie sera annulée si le châssis est ouvert par toute autre personne qu'un technicien d'un centre de service ou d'un établissement agréé AJA.</p> <p><b>Warnung!</b> Öffnen Sie das Gehäuse nicht. Keine der Geräteteile können vom Benutzer gewartet werden. Durch das Öffnen des Gehäuses wird die Garantie hinfällig, es sei denn, solche Wartungsarbeiten werden in einem AJA-Service-Center oder einem lizenzierten Betrieb vorgenommen.</p> <p><b>¡Advertencia!</b> No abra el chasis. El interior no contiene piezas reparables por el usuario. El abrir el chasis anulará la garantía a menos que se lo haga en un centro de servicio AJA o en un local autorizado.</p> <p><b>Advertência!</b> Não abra o chassi. Não há internamente nenhuma peça que permita manutenção pelo usuário. Abrir o chassi anula a garantia, a menos que a abertura seja realizada por uma central de serviços da AJA ou por um local autorizado.</p> <p><b>Avvertenza!</b> Non aprire lo chassis. All'interno non ci sono parti riparabili dall'utente. L'apertura dello chassis invaliderà la garanzia se non viene effettuata da un centro ufficiale o autorizzato AJA.</p>
---	--

	<p><b>Warning!</b> Disconnect the external AC power supply line cord(s) from the mains power before moving the unit.</p> <p><b>Avertissement!</b> Retirez le ou les cordons d'alimentation en CA de la source d'alimentation principale lorsque vous déplacez l'appareil.</p> <p><b>Warnung!</b> Trennen Sie die Wechselstrom-Versorgungskabel vom Netzstrom, bevor Sie das Gerät verschieben.</p> <p><b>¡Advertencia!</b> Cuando mueva la unidad desenchufe de la red eléctrica el/los cable(s) de la fuente de alimentación CA tipo brick.</p> <p><b>Advertência!</b> Remova os cabos CA de alimentação brick da rede elétrica ao mover a unidade.</p> <p><b>Avvertenza!</b> Scollegare il cavo dell'alimentatore quando si sposta l'unità.</p>
---	---

# Warranty Information

---

## Limited Warranty

---

AJA Video Systems, Inc. (AJA Video) warrants that this product will be free from defects in materials and workmanship for a period of five years from the date of purchase. If a product proves to be defective during this warranty period, AJA Video, at its option, will either repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, you the Customer, must notify AJA Video of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. The Customer shall be responsible for packaging and shipping the defective product to a designated service center nominated by AJA Video, with shipping charges prepaid. AJA Video shall pay for the return of the product to the Customer if the shipment is to a location within the country in which the AJA Video service center is located. Customer shall be responsible for paying all shipping charges, insurance, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. AJA Video shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than AJA Video representatives to install, repair or service the product, b) to repair damage resulting from improper use or connection to incompatible equipment, c) to repair any damage or malfunction caused by the use of non-AJA Video parts or supplies, or d) to service a product that has been modified or integrated with other products when the effect of such a modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY AJA VIDEO IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. AJA VIDEO AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. AJA VIDEO'S RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE WHOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER AJA VIDEO OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

# Index

---

## A

Analog Output Screen 17

## C

Color Space 17

Compliance Statements 22

## D

DIP Switch Settings 9

Examples 10

DIP switches 8

Documentation

Downloading 11

Mini-Converter 10

## F

Focus 16

Format (output) setting 17

## G

Graticule 16

## H

HD Down Convert 16

## I

Info Screen 19

## M

Mini-Config

Acquiring 10

Installation on Mac 12

Installation on PC 11

Operation 13

Running Multiple Converters 14

Screen Description 14

Startup 12

Mini-Config Screen

Analog Output 17

Info 19

Update 18

Video 15

Mini-Converter

Name 19

Mini-Converter Documentation 10

## N

Name

Of Mini-Converter 19

## P

Pedestal (output) setting 17

## S

Safety Statements 22

SD Aspect Convert 15

Software Update Procedure 18

Specifications 20

## U

Update Screen 18

## V

Video Screen 15

## W

Warnings

Safety 22